

### USER GUIDE

#### HOW TO PUT ON THE COVERALLS PROPERLY

1. Make sure the COVERALLS do not have any damage and all the accessories are in working order.
2. Have a seat or lean on a wall. This will help tuck the pant legs in your socks comfortably without losing balance.
3. Put your feet in the pant legs one by one; put on the rubber boots and set the pant legs straight to the outside.
4. Slip the COVERALLS on your shoulders and run your arms through the sleeves one at a time.
5. Fit the goggles and mask on your face.
6. Slip the hood on so that its rubber edge covers the hair on your head.
7. Zip up to the top; the zipper should about upon your chin.
8. Put on the rubber gloves, putting the COVERALLS cuffs over the gloves.
9. Before use, stretch out and sit down to make sure the garment sits properly and comfortably.

#### HOW TO TAKE OFF THE COVERALLS SAFELY

1. Unzip the COVERALLS till the end.
2. Take the hood off your head without touching your face with the gloves.
3. In order to take the COVERALLS off your shoulders, put your hands behind your lower back and pull one of the sleeves. After getting one hand free, take the other hand out of its sleeve together with the gloves.
4. Seat yourself and slip the COVERALLS pants down touching them with your hands on the inside.
5. Take off the rubber boots by pushing the heel of a boot with the toe of the other boot; after that, take out the other foot.
6. Then remove the protective equipment from your face with the clean hands.
7. Dispose of the garment and face protection equipment after use.

#### CHARACTERISTICS

The TECRON Pro protective COVERALLS are intended for single use and require no special storage conditions (temperature +15 to +30°C without UV rays exposure).

The garment helps protect against chemical toxic substances in weak concentrations that are sprayed or sprinkled, including spraying and sprinkling under high pressure; the protection class is TYPE5 and TYPE6.

The COVERALLS retain their protective properties for more than five years, but their antistatic performance may lower due to humidity change, wear, damage or contamination.


#### RECOMMENDATIONS FOR USE

Before using the TECRON Pro protective COVERALLS make sure that the COVERALLS are suitable for use with the reagent being used.


Also, make sure that the garment is duly grounded, for example, by means of suitable footwear, floor coating or a grounding wire.

The garment is not intended for protection from mains voltage or fire, and is not suitable for use in explosive environment without special clothing.

For maximum protection, it is recommended to seal the garment with protective tape in the areas of cuffs, hood and around the ankles.

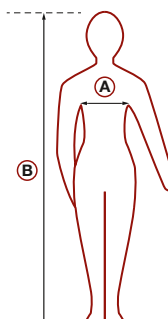

	(A)	(B)
<b>S</b>	84-92	160-169
<b>M</b>	92-100	167-176
<b>L</b>	100-108	174-181
<b>XL</b>	108-115	179-187
<b>XXL</b>	115-124	186-194
<b>XXXL</b>	124-132	192-200
<b>XXXXL</b>	132-140	198-206

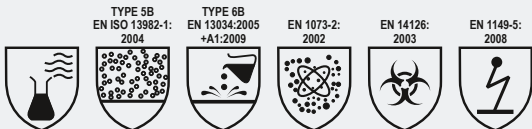

THE MANUFACTURING COMPANY NOT RESPONSIBLE FOR ANY IMPROPER USE OF THE COVERALLS.